Q1: Can Lux units work with generator insteading of utility grid?

A: Yes, all lux units support generator function

Q2: How do I connect the generator with Lux units?

A: You can connect the generator output to inverter Grid terminal. If you have both grid and genset input, you need an external ATS

Q3: What else do I need to do after connect the generator?

A: You should enable 'Micro-grid' function via the APP or Web page while you connect the generator to the Lux unit. Battery will get charged when the generator is turned on.

Q4: Can I control the generator by the inverter?

A: Yes, A external control box (please check with your installer or distributor if you need it) is needed, and your generator should support external control function. The generator will be automatically started when battery voltage is lower than the cut-off value or there is charge request or stop charge flag is set.



